

Oster®




MODEL **TSSTTVXXLL-049**




INSTRUCTION MANUAL
EXTRA LARGE CAPACITY TOASTER OVEN
READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS, PRODUCT LABELS AND WARNINGS BEFORE USING THE TOASTER OVEN.

1. **DO NOT** touch hot surfaces . Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Allow the unit to cool thoroughly before putting in or taking off parts. Always use the oven handles when moving the unit.
2. When the unit is not in use and before cleaning, unplug the oven from the wall outlet. Note: Make sure the oven is turned off before unplugging.
3. To protect against risk of electrical shock, do not immerse the appliance in water or any other liquids.
4. **DO NOT** operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner. Take this appliance only to the nearest Authorized Service Center for examination, repair or adjustment.
5. **DO NOT** use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.
6. **DO NOT** use outdoors or for commercial purposes.
7. **DO NOT** use this appliance for other than its intended use.
8. **DO NOT** let the cord dangle over the edge of a tabletop or countertop or touch hot surfaces.
9. **DO NOT** place the appliance near a hot gas or electric burner or in a heated oven.
10. Extreme caution should be used when using containers constructed of material other than metal or glass.
11. **DO NOT** store any items on top of the appliance when in operation. A fire may occur if the toaster oven is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation.
12. When using the oven, pull the unit out a minimum of 15 cm (6 inches) away from walls on all sides. Remove cords from other products from behind the oven.
13. **DO NOT** store any materials, other than manufacturer's recommended accessories, in this unit when not in use.
14. **DO NOT** place any flammable materials in oven, such as paper, cardboard, plastic or any materials that may catch fire or melt.
15. **DO NOT** cover the oven with metal foil. This will cause overheating of the appliance.

- 
- 
- 
16. The door or the outer surface may get hot when the appliance is operating.
 17. Oversized foods or metal utensils must not be inserted in the appliance as they may create a fire or risk of electrical shock.
 18. **DO NOT** clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
 19. When broiling, use extreme caution when removing tray or disposing of hot grease.
 20. The door and the outer surface may get hot when appliance is used.
 21. To turn this appliance off, return all controls to the off "O" position.
 22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 23. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.
 24. The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
 25. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farm houses, motels and other residential type environments.


THIS UNIT IS FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

SHORT POWER SUPPLY CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

DESCRIPTION OF THE APPLIANCE

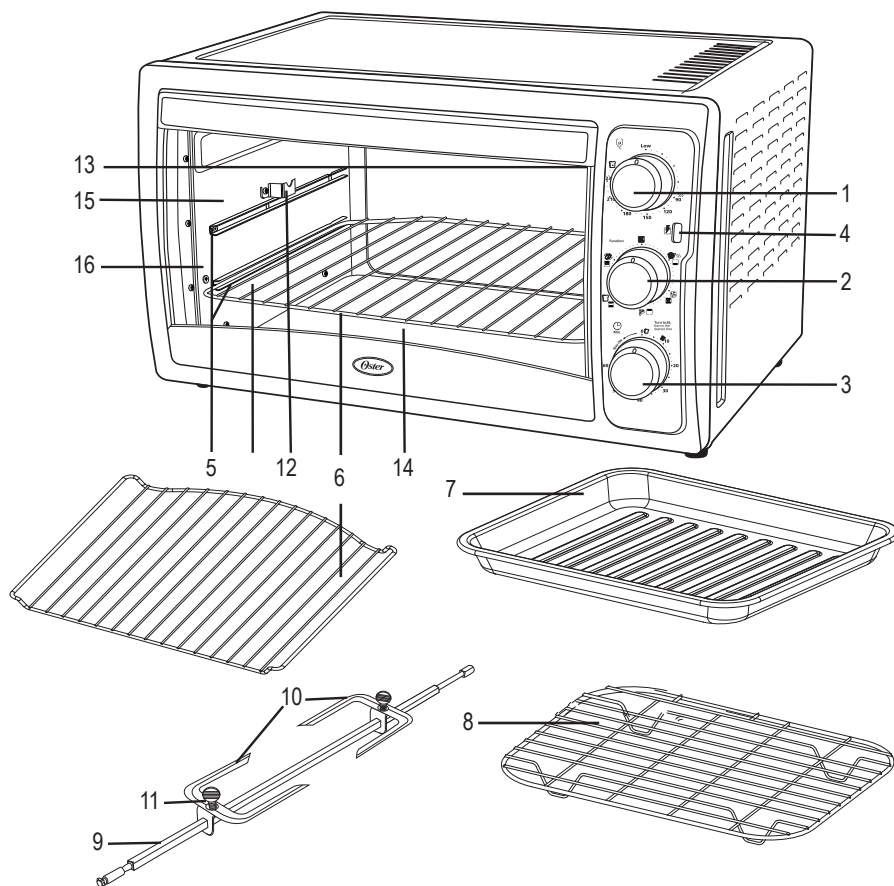

1. Temperature Selector Knob
2. Function Selector Knob
3. Timer Selector Knob
4. Power Light
5. Two Rack Positions
6. Two Removable Wire Racks
7. Baking Pan
8. Broil Rack
9. Rotisserie-Spit

10. Spit Forks
11. Thumb Screws
12. Spit Mounting Brackets
13. Interior Light
14. Crumb Tray
15. Easy Clean Interior Walls
16. Glass Door

LEARNING ABOUT YOUR TOASTER OVEN

1. **Temperature Selector Knob** – Adjust the thermostat dial to the desired temperature (See Figure 1).
2. **Function Selector Knob** – Adjust the dial to select cooking function (See Figure 2).
3. **Timer Selector Knob** – Adjust the dial to the desired cooking time (See Figure 3).
4. **Power Light** – Indicates that oven is plugged in and that the timer is set to begin warming.
5. **Crumb Tray** – Collects crumbs or fallen food particles. Pulls out for easy cleaning.
6. **Glass Door** – Lets you to see food while cooking.
7. **Easy Clean Interior Walls** – Allows for easy cleaning.
8. **Baking Pan** – Use for all your baking needs.
9. **Two Wire Racks and Dual Rack Positions** – For added cooking versatility.
10. **Rotisserie Spit** – Enables rotisserie style cooking.
11. **Interior Light** – Helps with monitoring food while cooking.

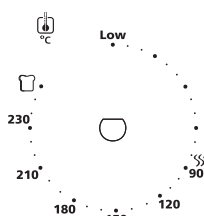


Figure 1

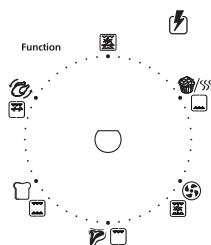


Figure 2

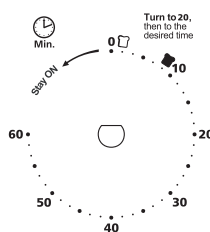


Figure 3

PREPARING TO USE YOUR TOASTER OVEN FOR THE FIRST TIME

If you are using your toaster oven for the first time, please be sure to:

- Remove any stickers from the surface of the oven.
- Open oven door and remove all printed documents and paper from inside the toaster oven.
- Clean the rack, tray, and pan with hot water, a small amount of dishwashing liquid and a nonabrasive sponge or cleaning pad.
- **DO NOT IMMERSE THE BODY OF THE UNIT IN WATER.**
- Dry the unit thoroughly before using.
- Select a location for the toaster oven. The location should be in an open area on a flat counter where the plug will reach an outlet.
- Plug the toaster oven into the appropriate electrical outlet.

The heating elements are designed to work efficiently and maintain a precise temperature.

You may not see the elements glowing, however they are working properly.

PLEASE NOTE – It is recommended that the toaster oven heat at 230°C for approximately 15 minutes to eliminate any manufacturing residue that may remain after shipping.

USING YOUR TOASTER OVEN

TO USE THE PRE-HEAT FUNCTION (SEE FIG. 4)

1. Select desired oven rack position. (See “Positioning Rack” Section)
2. Close the oven door.
3. Turn the Function selector knob to the PRE-HEAT “☒” position. Both the top and bottom heating elements will operate.
4. Turn the temperature control knob “☒” to the desired temperature.
5. Set the timer knob “🕒” to desired time. It is recommended to set the timer for 5-8 minutes for the oven to pre-heat.
6. When pre-heating is completed, select the desired function and follow the instructions below.

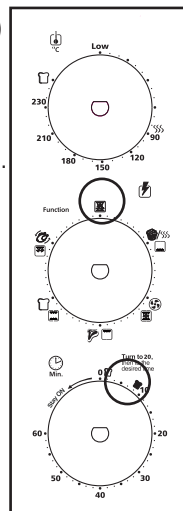


Figure 4

TO USE THE BAKE/WARM FUNCTION (SEE FIG. 5)

1. Select desired oven rack position. (See “Positioning Rack” Section)
2. Arrange food on one of the wire racks or in the baking pan.
3. Close the oven door.
4. Turn the Function knob to the BAKE/WARM “☒/☒☒☒” position. Only the bottom heating elements will operate. (The heating elements will cycle ON and OFF to maintain temperature.)
5. Turn the temperature control knob “☒” to the desired temperature.
6. Turn the timer knob “🕒” to the desired time. The timer can be set for up to 60 minutes and further to “Stay ON” mode for additional 60 minute increments as desired. The interior light turns on when timer is on. At the end of the cooking time, a bell signal sounds, and the oven turns off automatically.
7. When warming is completed, open door fully and remove food carefully with oven mitt.

WARNING: Cooked food can be very hot, especially pastry fillings. Handle with care.

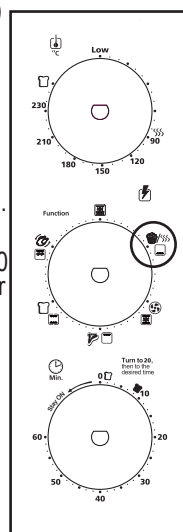


Figure 5

TO USE THE TURBO CONVECTION BAKE FUNCTION (SEE FIG. 6)

1. Select desired oven rack position. (See "Positioning Rack" Section)
2. Arrange food on one of the wire racks or in the baking pan.
3. Close the oven door.
4. Turn the Function knob to the TURBO CONVECTION BAKE "🔥" position. The top and bottom heating elements will operate and the turbo convection fans will be activated. (The heating elements will cycle ON and OFF to maintain temperature.)
5. Turn the temperature control knob "🌡️" to the desired temperature.
6. Turn the timer knob "🕒" to the desired time. The timer can be set for up to 60 minutes and further to "Stay ON" mode for additional 60 minute increments as desired. The interior light turns on when timer is on. At the end of the cooking time, a bell signal sounds and the oven turns off automatically.
7. When baking is completed, open door fully and remove food carefully with oven mitt.

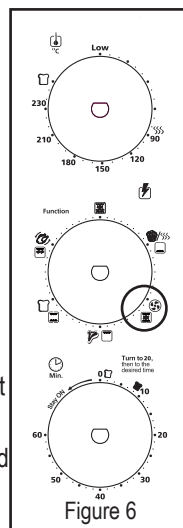


Figure 6

WARNING: Cooked food can be very hot. Handle with care. **Do not leave toaster oven unattended.**

FAQS ABOUT CONVECTION BAKING

What is Convection?

Answer: In your Toaster Oven there is a built in fan that circulates the hot air in the oven chamber to cook the food better and give a browning effect to it.

How do I adjust the time for Convection?

Answer: On average, convection will shorten the cooking time by 30% but it varies by food. It is suggested to go with a shorter cooking time to start with and then add time if it is needed.

What are the best foods to use with Convection?

Answer: While a shorter cook time is often desirable, baked foods in particular benefit from convection cooking as the circulating air keeps oven temperature consistent throughout.

TO USE THE BROIL FUNCTION (SEE FIG. 7)

1. Select desired oven rack position. (See "Positioning Rack" Section)
2. Place broil rack in baking pan.
3. Arrange food on broiler rack.
4. Close the door to the first notch, leaving approximately an 8 cm (3-inch) gap at the top. This will ensure adequate airflow during broiling.
5. Turn the Function knob to the BROIL "🔥" position. Only the top-heating element will operate. (The heating element will cycle ON and OFF to maintain temperature.)
6. Turn the temperature control knob "🔧" to the desired temperature.
7. Turn the timer knob "🕒" to the desired time. The timer can be set to for up to 60 minutes and further to "Stay ON" mode for additional 60 minute increments as desired. The interior light turns on when timer is on. At the end of the cooking time, a bell signal sounds, and the oven turns off automatically.
8. Turn food over about halfway through the broiling time.
9. When broiling is completed, open door fully and remove food carefully with oven mitt.

WARNING: Do not leave toaster oven unattended.

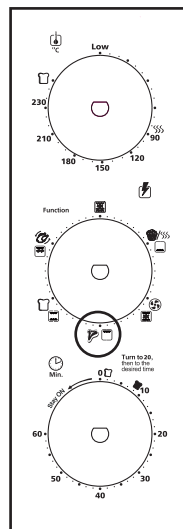


Figure 7

TO USE THE TOAST FUNCTION (SEE FIG. 8)

1. Select desired oven rack position. (See "Positioning Rack" Section)
NOTE: Different types of bread require different settings. Lighter breads and waffles require a lighter setting. Darker breads, muffins, and English muffins require a darker setting.
2. Arrange food on the wire rack.
3. Turn the Function knob to the TOAST "🍞" position. Both the top and bottom heating elements will operate. (The heating elements will cycle ON and OFF to maintain temperature.)
4. Turn the temperature control knob to the TOAST "🍞" setting.
5. Turn the timer knob "🕒" to select the desired toast setting.
6. When toasting is completed, open door fully and remove food carefully with oven grove.

WARNING: Cooked food can be very hot. Handle with care. **Do not leave toaster oven unattended.**

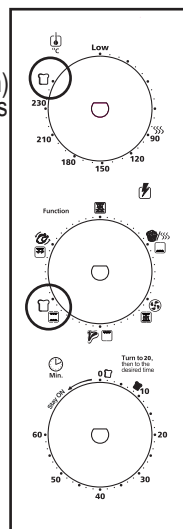


Figure 8

TO USE THE ROTISSERIE FUNCTION (SEE FIG. 9)

1. Place the chicken, turkey or other food you want to cook on the rotisserie spit. Use the two spit forks to hold the food in place in the center of the spit. Use the two spit screws to tighten the spit forks (see figure 1).
2. Use the spit holder tool to place the rotisserie spit on the spit mounting brackets inside the oven.
3. After securely placing the rotisserie spit in place, remove spit holder tool and close the oven door.
4. Turn the Function knob to the ROTISSERIE "🌀🍗" position. Only the top-heating element will operate and the Rotisserie motor will be activated. (The heating element will cycle ON and OFF to maintain temperature.)
5. Turn the temperature control knob "👉" to the desired temperature.
6. Turn the timer knob "🕒" to the desired time. The timer can be set for up to 60 minutes and further to "Stay ON" mode for additional 60 minute increments as desired. The interior light turns on when timer is on. At the end of the cooking time, a bell signal sounds and the oven turns off automatically.
7. When cooking is completed, open door fully and use the spit holder tool to remove food carefully.
8. Place pan on lowest rack when the rotisserie function is in use to prevent dripping of hot fluids and food into the oven for easier clean up.

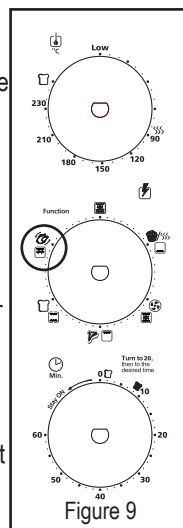


Figure 9

WARNING: The rotisserie-spit, spit forks, screws and cooked food can be very hot. Handle with care. **Do not leave toaster oven unattended.**

POSITIONING RACK

To accommodate a wide variety of foods, the oven has two rack positions. (See Figure 10)

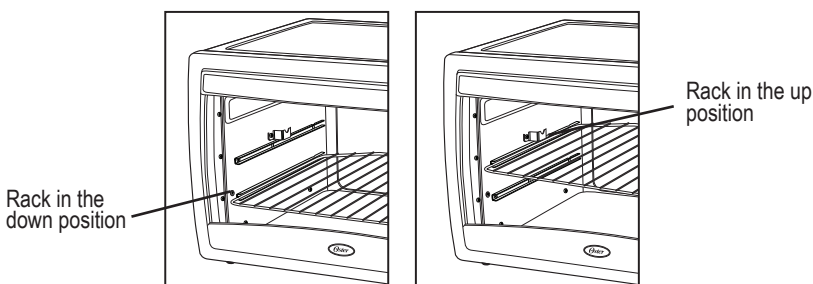


Figure 10

Positioning of the rack will depend on the size of the food and desired browning. Before removing the rack allow the unit to cool.

PLEASE NOTE – For best toast and pizza results, position the rack in the upper rack position.

CLEANING YOUR TOASTER OVEN

Before cleaning your toaster oven, unplug it and allow it to cool. To clean, wipe with damp cloth. **DO NOT IMMERSE IN WATER!** Make sure to use only mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the coating on this unit. Empty crumb tray frequently to avoid accumulation of crumbs. Toaster oven racks are dishwasher safe (**top of dishwasher only**).

STORING YOUR TOASTER OVEN

Allow the appliance to cool completely before storing. If storing the toaster oven for long periods of time, make certain that the toaster oven is clean and free of food particles. Store the toaster oven in a dry location such as on a table or countertop or cupboard shelf. Other than the recommended cleaning, no further user maintenance should be necessary.

HELPFUL TIPS/ TROUBLESHOOTING

PROBLEM	POTENTIAL CAUSE	SOLUTION
<ul style="list-style-type: none">Overcooked / undercooked foods.	<ul style="list-style-type: none">Incorrect temperature or time setting.Rack placement.	<ul style="list-style-type: none">You may have to adjust the time and temperature to the desired taste.Because your oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time.Refer to "Positioning Rack" Section. Rack may need to be adjusted to accommodate food type.
<ul style="list-style-type: none">Burnt smell.	<ul style="list-style-type: none">Food build-up inside oven, on heating elements or in crumb tray.	<ul style="list-style-type: none">Refer to "Cleaning Your Toaster Oven" Section.
<ul style="list-style-type: none">Oven does not turn ON.	<ul style="list-style-type: none">Unit is unplugged.Timer was not turned past 20 minute mark.	<ul style="list-style-type: none">Plug the toaster oven into appropriate electrical outlet.Set timer knob and temperature knob to the desired setting. Both must be turned on to operate the toaster oven.
<ul style="list-style-type: none">Only one heating element is heating up.	<ul style="list-style-type: none">Function setting selection determines which heating element will operate.	<ul style="list-style-type: none">When toasting, make sure the oven is not set to broil setting.
<ul style="list-style-type: none">Heating elements do not stay ON.	<ul style="list-style-type: none">Heating elements will cycle ON and OFF to maintain proper heat.	<ul style="list-style-type: none">Be certain that function is as desired.

WARRANTY

Sunbeam Products, Inc doing business as Jarden Consumer Solutions, its affiliates and subsidiaries, Jarden Consumer Solutions of India Private Limited (hereinafter collectively referred to as "SPI") warrant that, for a period of two (2) years from the date of purchase, this product will be free from defects in material and workmanship (the "Warranty"). Please preserve the Warranty Card and Cash Memo duly stamped and signed by the dealer, as this will be required for any claims under this Warranty.

- The rights and benefits under this Warranty are additional to your statutory rights, which are not affected by this Warranty.
- During the period Warranty, SPI at its choice will repair or replace this product or any component of the product found to be defective free of cost through (the Dealer from whom the product was purchased or through the service center listed in card-business people to confirm), provided that:
 - SPI is promptly informed of the defect.
 - The product has not been altered in any way or subjected to misuse or repair by the person other than a person authorized by SPI.
- No rights are given under the Warranty to a person acquiring the product second hand.
- Any repaired or replaced product will be warranted on these terms for the remaining portion of the Warranty in the country where the product was purchased.
- Liability for consequential loss or damage is neither accepted nor is it implied.
- The following are not covered under SPI's Warranty:
 - a. If product was used in any manner other than the intended use.
 - b. If product has not been used according to the instruction manual/User's Manual, included with the product.
 - c. If defects are caused by improper or reckless use.
 - d. If product was altered or repaired by anyone other than those authorized by the national manufacturer, importer or respective merchant.
 - e. Use of incorrect current or voltage or faulty electric power supply.
 - f. Normal wearing and tearing of parts and accessories resulting from regular use.
 - g. Damages resulting from transportation, accidents, mishandling or negligence on the part of the customer.
 - h. The following part/components:
 - Glass container
 - Light bulb
 - Accessories
 - i. Industrial or commercial use of product.

Waste electrical products should not be disposed of with household waste.
Please recycle where facilities exist.

AUTHORIZED SERVICE CENTERS

Region	State	City	Name	Address	Contact Person	Contact No.
East	West Bengal	Kolkata	Jeeves Consumer Services Pvt Ltd	356, Jodhpur Park, Kolkata - 700068	Someswar Basu	(033) 40012100
	West Bengal	Kolkata	Southern Service	6/19A, Prince Anwarshah Road, Poddar Nagar, Kolkata - 700068	Subrata Manna	(033) 24729651 / 65488822
	West Bengal	Kolkata	Baishanu Service Care	55D, Adaya Nath Saha Road, Lake Town, Near Jaya Cinema, Kolkata - 700048	Piyush Nandan	(033) 40664210
	West Bengal	Howrah	Time n Service	37 & 38, Mohenath Lane, Salkia, Howrah - 711106	Tapas Hazra	(033) 65639720
	West Bengal	Hooghly	DNP Enterprises	52, Sahaganj Main Road, P.O. Sahaganj, Near Bandel Station, Hooghly - 712104	Indrajit Bag	(0) 9163668360
	West Bengal	Barrackpore	Balaji Enterprise	4/E/A Barasat Road, Barrackpore, Dist. North 24 Parganas, Near 15 No. Rail Gate, Barrackpore - 700122	Pradip Kr Ghosh	(033) 25451224
	West Bengal	Siliguri	S D Electronics	Deys Lodge, 138/69/57, Nazrul Sarani, Ashrampara, Siliguri - 734001	Arup Dey	(0353) 2526028
	West Bengal	Asanol	Yes Service	Hutton Road, Near Mahal Banquet Marriage Hall, Asanol - 713301	Sarfaraz Ahmed	(03228) 2280029
	Assam	Guwahati	Multi Track Services	G S Road, Ground Floor, Bora Service Station, Ulubari, Guwahati - 781007	Kallol Dutta	(0361) 2457296

AUTHORIZED SERVICE CENTERS

North	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	# E-10, Arya Samaj Road, School Road, Uttam Nagar, Delhi - 1100059	Md Khalid Pervez	(011) 45785915
	Delhi	Delhi	Jeeves Consumer Services Pvt Ltd.	R-32, 2nd Floor, Vikas Marg, Shakarpur, Opp. Heera Sweets, Metro Pillar # 46 , Delhi - 1100092	Manjeet Singh	(011) 47754764
	Delhi	Delhi	S T Services	M-131, 1st Floor, Guru Harkrishan Nagar, Paschim Vihar, New Delhi - 110041	Vipin Yadav	(011) 32958438 / 45586987
	Haryana	Gurgaon	Jeeves Consumer Services Pvt Ltd.	4/18 A, 1st Floor, Laxmi Garden, Behind Police Chowki, Khandsa Road, Gurgaon-122001	Karamvir Fogaat	(0124) 4073434
	Haryana	Faridabad	Jeeves Consumer Services Pvt Ltd.	5H-49, 1st Floor, NIT Faridabad -121001	Manoj Kumar Panwar	(0129) 4163003
	Uttar Pradesh	Noida	Jeeves Consumer Services Pvt Ltd.	1st Floor, Above Punjab ATM, Sector-22, Chaura More Main Road, Near Oriental Bank of Commerce, Opp. Rajkiya Inter College, Noida, U.P - 201301	Devender Singh	(0120) 4162644
	Uttar Pradesh	Lucknow	Swastik Customer Care	A-1/3, SEC-H Aliganj, Near Kendriya Bhawan, Lucknow - 226020	Uma Shankar Mishra	(0522) 3298003 / 4102581 / 4102582
	Uttar Pradesh	Kanpur	Shubham Electronics	192, Manohar Nagar Barra -3 , Opp Deepshika Guest House, Kanpur - 208027	Suman Gupta	(0512) 2283394 / 2602029
	Uttar Pradesh	Agra	Sai Electronics	25/113, Gandhi Nagar, Agra - 282 003	Ajay Singhal / Sunil	(0562) 3297005
	Haryana	Ambala	Telecare	Old Hospital Road, Bara Thakur Dwara, Opp. Polytechnic, Ambala City - 134003	Devinder Sharma	(0171) 25567369
	Haryana	Sonapat	Saibaba Enterprises	House No. 1510, Sector - 15, Sonapat - 131001	Pramod Sharma	(0130) 6411206
	Haryana	Karnal	Jeeves Consumer Services Pvt Ltd.	Shop # 50, Ground Floor, Mayapuri, Rajiv Gandhi Marg/ Near Raj Palace, Meeraghati Chowk, Karnal - 132001	Neeraj Sharma	(0184) 4022201
	Punjab	Mohali	Jeeves Consumer Services Pvt Ltd.	# SCF-4, Basement, The High Land Society, NAV, Baltana, Zirakhpur, Mohali-140603	Shiv Dhandra	(0176) 2652574
	Punjab	Ludhiana	Jeeves Consumer Services Pvt Ltd.	Shop # 18B, Dhyan Singh Commercial Complex, Opp. Bus Stand, Ludhiana - 141001	Gurbeer Singh	(0161) 2444002
	Punjab	Jalandhar	Jeeves Consumer Services Pvt Ltd.	EH-31, Laddowali Road, Opposite Gurudwara, Jalandhar - 144001	Ashok Kumar	(0181) 2221707
	Punjab	Amritsar	Keerat Electronics	Narangh Bazar, Shaheed Bhagat Singh Road, Chihchahra, Amritsar - 143 001	Sukhdeep / Mantreet Singh	(0183) 2450095
	Himachal	Shimla	Suvidha Electronics	Mehta Niwas, Ground Floor, Near Himfead Building, B C S, New Shimla - 171009	Rajesh Kumar	(0) 9816457886
	Himachal	Mandi	Kuldeep Electro Care	Neear FCI Godown, Kehanwal Road, Ram Nagar, Mandi - 175001	Kuldeep Singh	(01905) 222140 / 329574
	Rajasthan	Jaipur	Jeeves Consumer Services Pvt Ltd.	A-79, Subash Nagar Shopping Centre, Jaipur - 302016	Vipendra Singh	(0141) 4035102

AUTHORIZED SERVICE CENTERS

West	Maharashtra	Mumbai	S P Services	Shop No. 10, Abdul Sattar Compound, Fitwala Road, Opp. Satguru Darshan Bldg., Near Railway Station, Elphinston Road (West), Mumbai - 400013	Palsingh Panyari	(022) 24326726 / 24312623
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Plot No 27/5, Pawani Chowk, Opp Mulund Darshan Building, Mulund Colony, Mulund (W), Mumbai - 400082	Ramesh Yadav	(022) 65288597
	Maharashtra	Mumbai	Jeeves Consumer Services Pvt Ltd.	Shop No.1-1A, Ground floor, Kirti Co-Op Housing Society, Ramachandra Extn Lane, Near Movie Time, Evershine Nagar, Malad(W), Mumbai-400064	Murali Joshi	(022) 65278590
	Maharashtra	Pune	Jeeves Consumer Services Pvt Ltd.	No. 337, Sai Leela, 1st Floor, Datt Wadi, Mhasoba Chowk, Pune - 411030	Saket Dubey	(020) 24321679
	Maharashtra	Nagpur	Technic Services	Khare Building, Hanuman Lane, Sitabuildi, Nagpur - 440 012	Dilip Panda	(0712) 2550076
	Maharashtra	Chandrapur	Suvidha Electronics	No. 1, Devt Appartment, Church Road, Hanuman Nagartukum, Chandrapur - 442401	Subash Deashkar	(07172) 258966 / 256453
	Maharashtra	Kolhapur	Sikir Mobiles	1492 C Ward, Laxmipuri, Opp. TATA Brand Stores, Kolhapur - 416001	Sukir Bakare	(0) 9372555011
	Maharashtra	Aurangabad	Emperor Services	S-5,Manik Arcade Kalda Corner, Opp Chowbey Hospital, Chetna Nagar, Aurangabad -31005	Mr. Willy Bento Colaco	(0240) 2350606
	Maharashtra	Nashik	Harsha Electronics	3, Talak Complex, Rachna Vidyalaya Road, Sharanpur Roda, Nashik - 422002	Pravin Patil	(0) 9422254240
	Goa	Salcete	Jolly Enterprises	Shop # G-2, 78/A Nuvem Enclave, Along NH-17 Highway, Belloy Nuvem, Salcete - 403604	John Gonzanalves	(0832)2791800
	Gujarat	Ahmedabad	Jeeves Consumer Services Pvt Ltd.	No. 37, Om Tower, Near Star Bazar, Jodhpur Cross Road, Satellite, Ahmedabad - 380015	Girish Parmar	(079) 40080485
	Gujarat	Baroda	Uday Refrigeration	G/3 Nandanvan Complex, Atma Jyoti Ashram Road, Behind Citizen Society, Ellora Park, Baroda	Shailesh	(0265) 6590948
	Gujarat	Surat	Sadgurudev	Shop No. L/6, Shankutal Complex, Beside Sangvi Tower, Near Gujarat Gas Circle, Adajan Patia, Surat - 395009	Manoj Rana	(0261) 6540417
	Gujarat	Rajkot	PC Systems	4-Sardar Nagar (West), Tagore Road, Near Astron Circle, Rajkot-360001	Manoj Gohil	(0281) 2480479
	Madhya Pradesh	Indore	Cool Home Refrigeration	LG-70, Trade Centre, 18, South Tukogunj, Indore- 452 001	Husain Anjum	(0731) 4076404
	Madhya Pradesh	Bhopal	Jeeves Consumer Services Pvt Ltd.	Ward no 47, Goyal Vihar, Ground floor, Flat no-G-1, 31-C, Zone-2, MP Nagar, Bhopal	Ram Ashish Prasad	(0755) 4059310


AUTHORIZED SERVICE CENTERS

South	Tamil Nadu	Chennai	Jeeves Consumer Services Pvt Ltd.	New No.3, Old No.1-A, Sripuram, 2nd Lane, Royapetah, Chennai-600114	Dinesh Kumar	044-42632371
	Tamil Nadu	Chennai	G C Services	Old No. 12, New No. 37, 1st Floor, Sattanna Naichen Street, Nehru Timber Market, Choolai, Chennai - 600112	Naval R	(044) 26690084 / 42822868
	Tamil Nadu	Coimbatore	V K Engineering	108-A/92, West Ponnuram Road, Ground Floor (Near Telephone Exchange), R.S.Puram, Coimbatore - 641002	Selvadurai	(0422) 2541172
	Pondicherry	Pondicherry	Bestronics	49, Saint Theresa Street, Pondicherry - 605001	B Jayashankar	(0) 9443728020
	Andhra Pradesh	Hyderabad	Jeeves Consumer Services Pvt Ltd.	Flat No. 205, Karan Centre, Opp. IBP Petrol Pump and Karan Hotel, Park Lane, S.D.Road, Near Paradise Circle, Secunderabad - 500003	Kumararajan	(040) 64591168
	Andhra Pradesh	Vijaywada	Jeeves Consumer Services Pvt Ltd.	Door No.25-10-10A, G.S.Raju Road, Gandhi Nagar, Near Gymkhana Road, Vijayawada - 520003	Rahamatullah Gouse Khan	(0866) 6591168
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	No. 126, 1st Floor, 8th Main J.P.Nagar, 3rd Phase, Bangalore - 560078	Ramesh Kumar	(080) 41209331
	Karnataka	Bangalore	Jeeves Consumer Services Pvt Ltd.	First Floor, Khan Bldg, 7 & 8th Cross, Jakkasandra Extension, Bangalore - 560032	Surulivel	(080) 25520424
	Karnataka	Mangalore	Jeeves Consumer Services Pvt Ltd.	1st Floor, Quadra compound, Bejai, kapikad, Kavour Road, Mangalore -575004	Divakar Shetty	(0824) 2213699
	Karnataka	Mysore	Jeeves Consumer Services Pvt Ltd.	No.1095, 1st Floor, C&D Block, Lalithadri Road, Kuvempunagar, Mysore - 570023	Venkatesh.S.Kulkarni	(0821) 4191094

सुरक्षा संबंधी महत्वपूर्ण जानकारी

बिजली के उपकरणों का इस्तेमाल करते समय, निम्नलिखित सहित, बुनियादी सुरक्षा निर्देशों का हमेशा पालन किया जाना चाहिए :

टोस्टर ओवन का उपयोग करने से पहले सभी निर्देशों, उत्पाद लेबल और चेतावनियों को पढ़ लें।

1. गरम सतह वाले भागों को न छुएँ।  गरम उपकरणों का इस्तेमाल करते समय हमेशा ओवन के लिए बने दस्तानों का उपयोग करें और धातु से बने भागों को साफ करने से पहले ठंडा होने दें। हिस्सों को निकालने या लगाने से पहले यूनिट को पूरी तरह से ठंडा होने दें। यूनिट को उठाते समय हमेशा ओवन में लगे हैंडल का उपयोग करें।
2. यूनिट का उपयोग न करते समय और उसकी सफाई करने से पहले, इलेक्ट्रिक आउटलेट से ओवन का प्लग निकाल कर रखें। नोट: प्लग को निकालते समय ध्यान रखें कि ओवन का स्विच ऑफ हो।
3. बिजली के झटके से बचाव के लिए, उपकरण को पानी या किसी अन्य द्रव्य पदार्थ में न डालें।
4. धिसे हुए या क्षतिग्रस्त तार या प्लग वाले उपकरण या उपकरण खराब हो जाने पर या गलती से गिरने पर या किसी भी और तरीके से क्षतिग्रस्त हुए उपकरण को न चलाएँ। इस उपकरण को जाँच, मरम्मत या समायोजन के लिए केवल किसी निकटतम अधिकृत सर्विस सेंटर पर ही ले जाएँ।
5. केवल विनिर्माता द्वारा अनुशंसित संलग्न वस्तुओं का इस्तेमाल करें, ऐसा ना करने पर आग लगने या बिजली का झटका या चोट लगने का खतरा रहता है।
6. इस उपकरण को घर से बाहर या व्यावसायिक रूप से इस्तेमाल न करें।
7. अभीष्ट उद्देश्य के अलावा किसी और उपयोग के लिए इस उपकरण का उपयोग न करें।
8. तार को टेबल या काउंटर के किनारे पर लटका हुआ न छोड़ें और उसे गरम सतह वाले भागों से दूर रखें।
9. उपकरण को गरम गैस या इलेक्ट्रिक बर्नर के आसपास या किसी गरम ओवन में न रखें।
10. धातु या कॉच के अलावा किसी और पदार्थ से बने बरतनों का उपयोग करते समय अत्यंत सावधानी बरतनी आवश्यक है।
11. उपकरण का इस्तेमाल करते समय उस पर कोई सामान न रखें। आग लगने का खतरा तब हो सकता है जब चलते समय टोस्टर ओवन ढका हुआ हो या वह ज्वलनशील पदार्थों के संपर्क में आ रहा हो जैसे पर्दे, कपड़े, दीवार इत्यादि।
12. ओवन का उपयोग करते समय, यूनिट को चारों तरफ से दीवार से कम से कम 15 सेंमी. (6 इंच) दूर रखें। ओवन के पीछे से जा रही अन्य उत्पादों की तराँ को हटाकर रखें।
13. उपयोग न करते समय इस यूनिट में विनिर्माता द्वारा अनुशंसित सहायक उपकरणों के अलावा किसी भी अन्य वस्तु को न रखें।
14. ओवन में कोई भी ज्वलनशील पदार्थ न रखें जैसे कागज, गत्ता, प्लास्टिक या कोई भी ऐसा पदार्थ जो आग पकड़ सकता है या गल सकता है।
15. ओवन को फॉइल से न ढकें। नहीं तो इससे उपकरण बहुत अधिक गरम हो सकता है।



16. उपकरण के चलने पर उसका ढक्कन या बाहरी सतह गरम हो सकते हैं।
17. उपकरण में बहुत ज्यादा खाद्य सामग्री या बहुत बड़े आकार के धातु के बर्तन न डालें, क्योंकि इससे आग या बिजली का झटका लगने का खतरा हो सकता है।
18. इसे किसी खुरदरी वस्तु या झाँवों से रगड़कर साफ न करें। इनसे पैड खराब हो सकता है और उसके टुकड़ों के इलेक्ट्रिक पार्ट के संपर्क में आने पर बिजली का झटका लगने का खतरा हो सकता है।
19. बहुत अधिक गरम होने पर, ट्रे को निकालते समय या चिकनाई हटाते समय अत्यंत सावधानी बरतें।
20. उपकरण का उपयोग करते समय उसका ढक्कन या बाहरी सतह गरम हो सकते हैं।
21. इस उपकरण को ऑफ करने के लिए, सभी नियंत्रण बटनों को “O” की स्थिति पर सेट करें।
22. यह उपकरण संवेदी, अपाहिज, या कम मानसिक क्षमता अथवा अनुभवहीन और कम ज्ञान वाले व्यक्तियों (बच्चों सहित) द्वारा उपयोग किए जाने के लिए नहीं है, बशर्ते कि वह इस उपकरण का इस्तेमाल किसी की देखरेख में कर रहे हों या उनकी सुरक्षा के जिम्मेदार व्यक्ति द्वारा उन्हें उपकरण के इस्तेमाल करने के निर्देश दिए गए हों। बच्चे इस उपकरण के साथ न खेलें, इसका ध्यान रखें।
23. बच्चों के आस-पास या बच्चों, अथवा असमर्थ व्यक्ति द्वारा उपकरण को इस्तेमाल करने पर बहुत ही देखरेख की आवश्यकता है।
24. निर्देशों में यह स्पष्ट होना चाहिए कि उपकरणों को किसी बाहरी टाइमर या किसी और रिमोट-कंट्रोल सस्टम के माध्यम से चलाने के निमित्त नहीं बनाया गया है।
25. यह उपकरण घरेलू या उसी तरह के उपयोग के उद्देश्य से बनाया गया है जैसे: दुकानों, कार्यालयों और अन्य कार्य क्षेत्रों में कर्मचारियों के लिए बनी पेन्ट्री में, फार्म हाउस, मोटल और अन्य रिहायशी प्रकार के परिवेश।

यह उपकरण केवल घरेलू उपयोग के लिए है।


इन निर्देशों को ध्यान में रखें

शॉर्ट पॉवर सप्लाई कॉर्ड (छोटी लम्बाई की बिजली की तार) निर्देश

तार की लम्बाई कम रखी गई है ताकि उसके उलझने या उससे उलझ कर गिरने का खतरा ना हो। एक्सटेंशन कॉर्ड का उपयोग किया जा सकता है, यदि उसका इस्तेमाल करते समय सावधानी बरती जाए। यदि एक्सटेंशन कॉर्ड का इस्तेमाल करना है तो कॉर्ड की इलेक्ट्रिकल रेटिंग कम से कम उपकरण की इलेक्ट्रिकल रेटिंग जितनी होनी चाहिए। एक्सटेंशन कॉर्ड को समेट कर रखें ताकि यह काउंटर पर या टेबल से लटकती हुई न दिखाई दे, नहीं तो बच्चे इसे खींच सकते हैं या गलती से उसमें अटकने से गिर सकते हैं।




उपकरण का विवरण

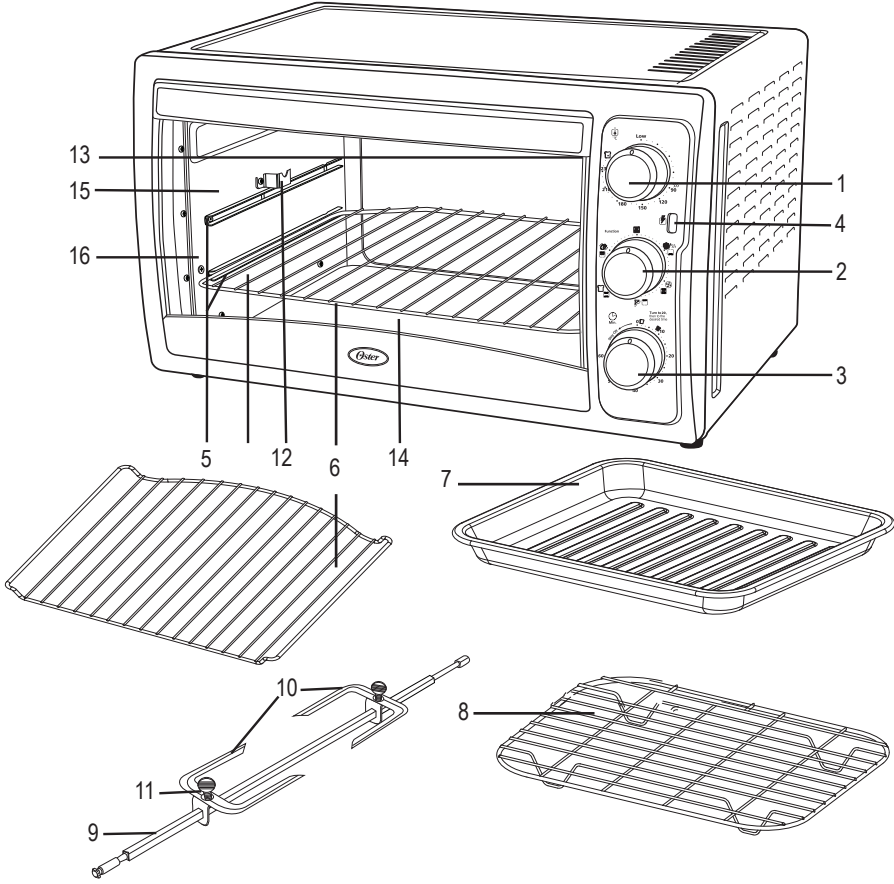


1. टेम्परेचर सेलेक्टर (तापमान का चयन करने के लिए) नॉब
2. फंक्शन सेलेक्टर (फंक्शन का चयन करने के लिए) नॉब
3. टाइमर सेलेक्टर (समय का चयन करने के लिए) नॉब
4. पॉवर लाइट
5. दोहरी रैक स्थितियाँ
6. दो बाहर निकाली जाने योग्य वॉयर रैक
7. बेकिंग पैन
8. ब्रॉइल रैक (रैक जिसमें ऊपर से आ रही ताप से खाना पकता है)
9. रोटिस्सेरी-स्पिट
10. स्पिट फोर्क्स
11. थंब स्कू
12. स्पिट माउंटिंग ब्रैकेट्स
13. इंटिरियर लाइट (आंतरिक लाइट)
14. क्रंब ट्रे
15. ईजी क्लीन इंटिरियर वॉल्स (आसानी से साफ की जाने वाली आंतरिक दीवारें)
16. ग्लास डोर (काँच का दरवाजा)

आपके टोस्टर ओवन के बारे में जानकारी


1. टेम्परेचर सेलेक्टर नॉब – थर्मोस्टैट डायल को वांछित तापमान पर समायोजित करें (चित्र 1 देखें)।
2. फंक्शन सेलेक्टर नॉब – कुकिंग फंक्शन (खाना पकाने का फंक्शन) का चयन करने के लिए डायल को समायोजित करें (चित्र 2 देखें)।
3. टाइमर सेलेक्टर नॉब – डायल को वांछित कुकिंग टाइम (खाने को पकाने में लगने वाला समय) पर समायोजित करें (चित्र 3 देखें)।
4. पॉवर लाइट – यह लाइट सूचित करती है कि ओवन को विद्युत आपूर्ति से जोड़ दिया गया है और उसे गरम करना शुरू करने के लिए टाइमर सेट कर दिया गया है।
5. क्रंब ट्रे – गिरी हुई खाद्य सामग्री और उसके चूरे को इकट्ठा करती है। बाहर निकालकर इसे आसानी से साफ किया जा सकता है।
6. ग्लास डोर – इसके माध्यम से आप खाने को पकाते समय उसे देख सकते हैं।
7. ईजी क्लीन इंटिरियर वॉल्स – आसानी से सफाई करने की सुविधा देती हैं।
8. बेकिंग पैन – बेकिंग संबंधी अपनी सभी आवश्यकताओं को पूरा करने के लिए इसका उपयोग करें।
9. दो वायर रैक और दोहरी रैक स्थितियाँ – एक अतिरिक्त सुविधा जो तरह-तरह का खाना पकाने में मदद करती है।
10. रोटिस्सेरी-स्पिट – रोटिस्सेरी शैली का खाना पकाना सक्षम करती है।
11. इंटिरियर लाइट – खाना पकाते समय उसका निरीक्षण करने में मदद करती है।

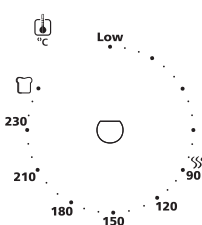

चित्र 1

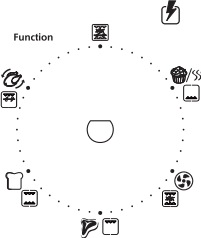

चित्र 2

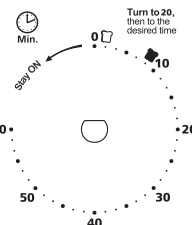

चित्र 3

अपने टोस्टर ओवन का पहली बार उपयोग करते समय उसे तैयार करना

यदि आप अपने टोस्टर ओवन का उपयोग पहली बार कर रहे हैं, तो यह सुनिश्चित करें:

- ओवन पर लगे हुए किसी भी प्रकार के स्टिकर्स को हटाएँ।
- ओवन डोर खोलें और टोस्टर ओवन के अंदर रखे सभी मुद्रित दस्तावेजों और कागज को बाहर निकालें।
- रैक, ट्रे, और पैन को गरम पानी, थोड़े से बरतन धोने के साबुन और मुलायम स्पंज या पैड से साफ करें।
- यूनिट के मुख्य भाग को पानी में न डालें।
- इस्तेमाल करने से पहले यूनिट को अच्छी तरह से सूखा लें।
- टोस्टर ओवन के लिए उपयुक्त स्थान का चयन करें। इसे रखने का स्थान सपाट काउंटर पर खुले क्षेत्र में होना चाहिए जहाँ से प्लग इलेक्ट्रिक आउटलेट में आसानी से पहुँच सके।
- टोस्टर ओवन को एक उपयुक्त इलेक्ट्रिक आउटलेट में लगाएँ।


हीटिंग तत्वों को कुशलता से काम करने और एक सटीक तापमान को बनाए रखने के लिए डिज़ाइन किया गया है। हो सकता है तत्व आपको जलते हुए दिखाई न दें, हालाँकि वे सुचारु रूप से कार्य कर रहे होते हैं।

कृपया नोट करें – यह अनुशंसा की जाती है कि शिपिंग के दौरान बचे-खुचे निर्माण अवशेषों को हटाने के लिए इस टोस्टर ओवन को लगभग 15 मिनट के लिए 230°C पर गरम करें।

अपने टोस्टर ओवन का उपयोग करना

प्री-हीट (पहले से गरम करना) फंक्शन का उपयोग करना (चित्र 4 देखें)


1. वांछित ओवन रैंक स्थिति का चयन करें। ("रैंक स्थिति निर्धारण" अनुभाग देखें)
2. ओवन डोर को बंद करें।
3. फंक्शन सेलेक्टर नॉब को प्री-हीट (PRE-HEAT) "☀️" स्थिति पर सेट करें। ऊपर और नीचे दोनों तरफ के हीटिंग तत्व कार्य करेंगे।
4. टेम्परेचर कंट्रोल नॉब को "🌡️" वांछित तापमान पर सेट करें।
5. टाइमर नॉब को "🕒" वांछित समय पर सेट करें। ओवन को प्री-हीट करने के लिए टाइमर को 5-8 मिनट पर सेट करने की अनुशंसा की जाती है।
6. प्री-हीटिंग पूरी हो जाने पर, वांछित फंक्शन का चयन करें। और नीचे दिए गए निर्देशों का पालन करें।

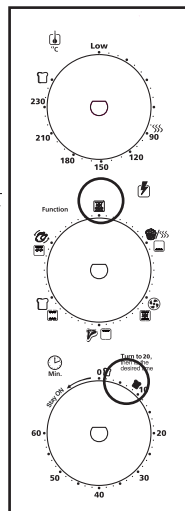

चित्र 4

बेक/वार्म फंक्शन का उपयोग करना (चित्र 5 देखें)


1. वांछित ओवन रैंक स्थिति का चयन करें। ("रैंक स्थिति निर्धारण" अनुभाग देखें)
 2. खाद्य सामग्री को किसी एक वायर रैंक पर या बेकिंग पैन में रखें।
 3. ओवन डोर को बंद करें।
 4. फंक्शन नॉब को BAKE/WARM (बेकध्वार्म) "☀️/☀️" की स्थिति पर सेट करें। केवल नीचे के हीटिंग तत्व कार्य करेंगे। (तापमान को नियंत्रित करने के लिए ये हीटिंग तत्व प्रक्रियाचक्र में ऑन (ON) और ऑफ (OFF) होते रहेंगे)।
 5. टेम्परेचर कंट्रोल नॉब को "🌡️" वांछित तापमान पर सेट करें।
 6. टाइमर नॉब को "🕒" वांछित समय पर सेट करें। टाइमर को 60 मिनट तक के लिए सेट किया जा सकता है और अगर आप चाहें तो आगे अतिरिक्त 60 मिनट की वृद्धि के लिए "Stay ON" पर सेट किया जा सकता है। टाइमर ऑन होने पर अंदर स्थित लाइट जल जाती है। कुकिंग का समय पूरा होते ही सिग्नल के तौर पर एक घंटी बजती है, और ओवन स्वतः ही चलना बंद हो जाता है।
 7. वार्मिंग के पूरा होते ही, डोर को पूरा खोलें और ओवन दस्तानों की मदद से खाद्य सामग्री को सावधानी से बाहर निकालें।
- चेतावनी: पका हुआ खाना बहुत गरम हो सकता है, खासतौर से पेस्ट्री की भरावन। सावधानी बरतें।

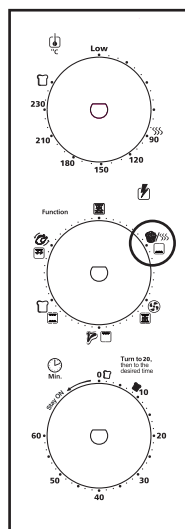

चित्र 5

टर्बो कन्वेक्शन बेक फंक्शन का उपयोग करना (चित्र 6 देखें)

1. वांछित ओवन रैक स्थिति का चयन करें। ("रैक स्थिति निर्धारण" अनुभाग देखें)
2. खाद्य सामग्री को किसी एक वायरर रैक पर या बेकिंग पैन में रखें।
3. ओवन डोर को बंद करें।
4. फक्शन नॉब को टर्बो कन्वेक्शन बेक (TURBO CONVECTION BAKE) "🌀🔥" स्थिति पर सेट करें। ऊपर और नीचे दोनों तरफ के हीटिंग तत्व कार्य करेंगे और टर्बो कन्वेक्शन फैंस (पंखे) सक्रिय हो जाएंगे। (तापमान को नियंत्रित करने के लिए ये हीटिंग तत्व प्रक्रियाचक्र में ऑन (ON) और ऑफ (OFF) होते रहेंगे।)
5. टेम्परेचर कंट्रोल नॉब को "🌡️" वांछित तापमान पर सेट करें।
6. टाइमर नॉब को "🕒" वांछित समय पर सेट करें। टाइमर को 60 मिनट तक के लिए सेट किया जा सकता है और अगर आप चाहें तो आगे अतिरिक्त 60 मिनट की वृद्धि के लिए "Stay ON" पर सेट किया जा सकता है। टाइमर ऑन होने पर अंदर स्थित लाइट जल जाती है। कुकिंग का समय पूरा होते ही सिग्नल के तौर पर एक घंटी बजती है, और ओवन स्वतः ही चलना बंद हो जाता है।

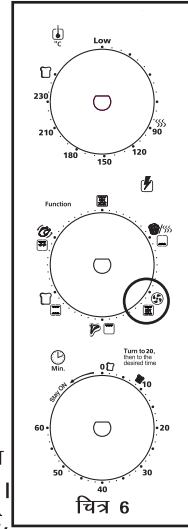

7. बेकिंग के पूरा होते ही, डोर को पूरा खोलें और ओवन दस्तानों की मदद से खाद्य सामग्री को सावधानी से बाहर निकालें।
चेतावनी: पका हुआ खाना बहुत गरम हो सकता है। सावधानी बरतें। टोस्टर ओवन को चलता हुआ छोड़कर न जाएं।

कन्वेक्शन बेकिंग के बारे में अक्सर पूछे जाने वाले प्रश्न

कन्वेक्शन क्या है?

उत्तर: आपके टोस्टर ओवन में एक अंतर्निर्मित पंखा है जो खाद्य सामग्री को बेहतर तरीके से पकाने और उसे एक भूरे रंग का प्रभाव देने के लिए ओवन चौम्बर में गरम हवा को परिसंचारित करता है।

मैं कन्वेक्शन के लिए समय कैसे समायोजित करूँ?


उत्तर: औसतन, कन्वेक्शन कुकिंग टाइम को 30% तक कम कर देगा लेकिन यह समय खाद्य सामग्री के आधार पर भिन्न-भिन्न होता है। इसलिए खाना पकाने के लिए कम कुकिंग टाइम के साथ शुरू करने का सुझाव दिया जाता है और अगर आवश्यकता पड़े तो उसमें अतिरिक्त समय जोड़ लें।

कन्वेक्शन के साथ उपयोग करने के लिए सबसे अच्छे खाद्य पदार्थ कौन से हैं?

उत्तर: जब प्रायः कम समय में खाना बनाना हो, तब कन्वेक्शन कुकिंग के जरिए बेक किया हुआ खाना बनाना खासतौर पर लाभदायक सिद्ध होता है क्योंकि परिसंचारी हवा ओवन के तापमान को सर्वत्र एक समान बनाए रखती है।

ब्रॉइल फंक्शन का उपयोग करना (चित्र 7 देखें)

1. वांछित ओवन रैंक स्थिति का चयन करें। ("रैंक स्थिति निर्धारण" अनुभाग देखें)
2. ब्रॉइल रैंक को बेकिंग पैन में रखें।
3. खाद्य सामग्री को ब्रॉइलर रैंक में रखें।
4. ऊपर की ओर लगभग 8 सेमी.(3-इंच) की जगह छोड़ते हुए, डोर को पहले स्तर पर बंद करें। यह ब्रॉइलिंग के दौरान पर्याप्त वायु प्रवाह सुनिश्चित करेगा।
5. फंक्शन नॉब को ब्रॉइल (BROIL) "🔥" की स्थिति पर सेट करें। केवल ऊपर का हीटिंग तत्व कार्य करेगा। (तापमान को नियंत्रित करने के लिए ये हीटिंग तत्व प्रक्रियाचक्र में ऑन (ON) और ऑफ (OFF) होते रहेंगे।)
6. टेम्परेचर कंट्रोल नॉब को "🌡️" वांछित तापमान पर सेट करें।
7. टाइमर नॉब को "🕒" वांछित समय पर सेट करें। टाइमर को 60 मिनट तक के लिए सेट किया जा सकता है और अगर आप चाहें तो आगे अतिरिक्त 60 मिनट की वृद्धि के लिए "Stay ON" पर सेट किया जा सकता है। टाइमर ऑन होने पर अंदर स्थित लाइट जल जाती है। कुकिंग का समय पूरा होते ही सिग्नल के तौर पर एक घंटी बजती है, और ओवन स्वतः ही चलना बंद हो जाता है।

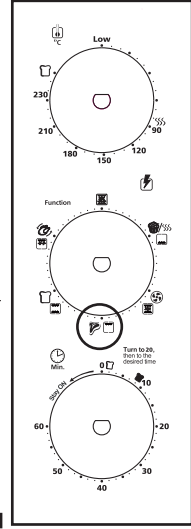


चित्र 7

8. ब्रॉइलिंग समय के दौरान लगभग बीच के समय में खाद्य सामग्री को पलटें।
9. ब्रॉइलिंग के पूरा होते ही, डोर को पूरा खोलें और ओवन दस्तानों की मदद से खाद्य सामग्री को सावधानी से बाहर निकालें।

चेतावनी: टोस्टर ओवन को चलता हुआ छोड़कर न जाएँ।

टोस्ट फंक्शन का उपयोग करना (चित्र 8 देखें)

1. वांछित ओवन रैंक स्थिति का चयन करें। ("रैंक स्थिति निर्धारण" अनुभाग देखें)
नोट: विभिन्न प्रकार की ब्रेड के लिए भिन्न-भिन्न सेटिंग की आवश्यकता होती है। लाइटर ब्रेड और वॉफल बनाने के लिए लाइटर सेटिंग की आवश्यकता होती है। डार्कर ब्रेड, मफिन, और इंग्लिश मफिन बनाने के लिए डार्कर सेटिंग की आवश्यकता होती है।
2. खाद्य सामग्री को वायर रैंक पर लगाएँ।
3. फंक्शन नॉब को टोस्ट (TOAST) "☀️" की स्थिति पर सेट करें। ऊपर और नीचे दोनों तरफ के हीटिंग तत्व कार्य करेंगे। (तापमान को नियंत्रित करने के लिए ये हीटिंग तत्व प्रक्रियाचक्र में ऑन (ON) और ऑफ (OFF) होते रहेंगे।)
4. टेम्परेचर कंट्रोल नॉब को टोस्ट (TOAST) "☀️" की स्थिति पर सेट करें।

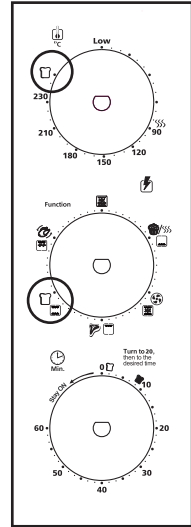


चित्र 8

5. टाइमर नॉब को "🕒" वांछित टोस्ट सेटिंग पर सेट करें।
6. टोस्टिंग के पूरा होते ही, डोर को पूरा खोलें और ओवन दस्तानों की मदद से खाद्य सामग्री को सावधानी से बाहर निकालें।

चेतावनी: पका हुआ खाना बहुत गरम हो सकता है। सावधानी बरतें। टोस्टर ओवन को चलता हुआ छोड़कर न जाएँ।

रोटिस्सेरी फंक्शन का उपयोग करना (चित्र 9 देखें)


1. चिकन, टर्की, या अन्य खाद्य जिसे आप रोटिस्सेरी-स्पिट पर बनाना चाहते हैं, रखें। खाद्य को स्पिट के बीच में रखने के लिए दो स्पिट फोर्क का उपयोग करें। स्पिट फोर्क को कसने के लिए दो स्पिट स्क्रू का उपयोग करें। (चित्र 1 देखें)।
2. ओवन के अंदर स्पिट माउंटिंग ब्रैकेट्स पर रोटिस्सेरी स्पिट रखने के लिए स्पिट होल्डर का उपयोग करें।
3. रोटिस्सेरी को उपयुक्त स्थान पर रखने के बाद, स्पिट होल्डर उपकरण को हटा दें और ओवन डोर को बंद कर दें।
4. फंक्शन नॉब को रोटिस्सेरी (ROTISSERIE) की स्थिति पर सेट करें। केवल ऊपर का हीटिंग तत्व कार्य करेगा और रोटिस्सेरी मोटर सक्रिय हो जाएगी। तापमान को नियंत्रित करने के लिए ये हीटिंग तत्व प्रक्रियात्मक में ऑन (ON) और ऑफ (OFF) होते रहेंगे।
5. टाइमर नॉब को "⌚" वांछित तापमान पर सेट करें।
6. टाइमर नॉब को "⌚" वांछित समय पर सेट करें। टाइमर को 60 मिनट तक के लिए सेट किया जा सकता है और अगर आप चाहें तो आगे अतिरिक्त 60 मिनट की वृद्धि के लिए "Stay ON" पर सेट किया जा सकता है। टाइमर ऑन होने पर अंदर स्थित लाइट जल जाती है। कुकिंग का समय पूरा होते ही सिग्नल के तौर पर एक घंटी बजती है, और ओवन स्वतः ही चलना बंद हो जाता है।
7. कुकिंग के पूरा होते ही, डोर को पूरा खोलें और खाद्य सामग्री को सावधानी से बाहर निकालने के लिए स्पिट होल्डर का उपयोग करें।
8. आसानी से सफाई करने के लिए ओवन में गरम तरल पदार्थ और खाद्य सामग्री के गिरने से बचाने हेतु रोटिस्सेरी फंक्शन का उपयोग करते समय सबसे नीचे के रैक में पैन को रखें।
चेतावनी: रोटिस्सेरी-स्पिट, स्पिट फोर्क, स्क्रू और तैयार खाद्य सामग्री अत्यधिक गरम हो सकते हैं। सावधानी बरतें। टोस्टर ओवन को चलता हुआ छोड़कर न जाएं।

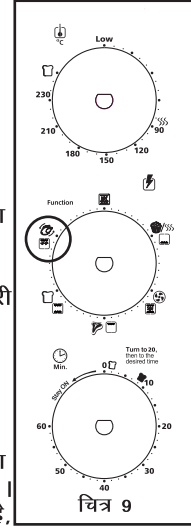

चित्र 9

रैक स्थिति निर्धारण

बहुत सी विभिन्न प्रकार की खाद्य सामग्री रखने के लिए, ओवन में दो रैक स्थितियाँ हैं (चित्र 10 देखें)

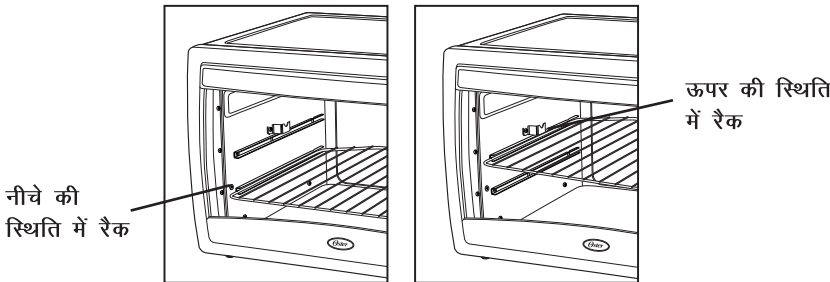

चित्र 10

रैक की स्थिति खाद्य के आकार और वांछित भूरेपन पर निर्भर करेगी। रैक को निकालने से पहले यूनिट को ठंडा होने दें।

कृपया नोट करें – परिणाम में बढ़िया टोस्ट और पिज्जा पाने के लिए, रैक को ऊपरी रैक स्थिति पर रखें।



अपने टोस्टर ओवन को साफ करना

अपने टोस्टर ओवन को साफ करने से पहले उसका प्लग हटाएँ और उसे ठंडा होने दें। साफ करने के लिए, इसे गीले कपड़े से पोंछें। पानी में न डालें। केवल सौम्य, साबुन के पानी का उपयोग करना सुनिश्चित करें। सफाई के लिए उपयोग किए जाने वाले खुरदरे पदार्थों, स्क्रबिंग ब्रश और रासायनिक पदार्थों से इस यूनिट पर लगी परत (कोटिंग) खराब हो जाएगी। क्रंब ट्रे पर खाद्य सामग्री के गिरे हुए चूरे या टुकड़ों के जमाव से बचने के लिए उसे थोड़े-थोड़े समय पर खाली करते रहें। टोस्टर ओवन के रैक डिशवॉशर सुरक्षित हैं (केवल डिश वॉशर के शीर्ष पर)।

टोस्टर ओवन को सुरक्षित रखना

उपकरण को उठाकर रखने से पहले उसे पूरी तरह से ठंडा होने दें। यदि टोस्टर ओवन को एक लंबी अवधि के लिए उठाकर रखना है, तो सुनिश्चित कर लें कि टोस्टर ओवन साफ है और उसमें खाद्य सामग्री का कोई भी कण लगा न रह गया हो। टोस्टर ओवन को किसी सूखे स्थान जैसे टेबल पर या काउंटर के ऊपर या अलमारी में रखें। अनुशंसित स्वच्छता के अतिरिक्त, उपयोगकर्ता द्वारा किसी और रखरखाव की आवश्यकता नहीं है।

मददगार युक्तियाँ/समस्या निवारण

समस्या	संभावित कारण	समाधान
<ul style="list-style-type: none"> अधिक पकी हुई/कम पकी हुई खाद्य सामग्री। 	<ul style="list-style-type: none"> अनुचित टेम्परेचर या टाइम सेटिंग। रैक का स्थापन। 	<ul style="list-style-type: none"> आपको समय और तापमान अपनी इच्छानुसार समायोजित करना होगा। क्योंकि आपका यह ओवन आपके नियमित ओवन से छोटा है, इसलिए यह जल्दी गरम होगा और सामान्यतः खाना कम समय में खाना पकाएगा। “रैक निर्धारण” अनुभाग देखें। रैक को खाद्य प्रकार के आधार पर समायोजित करने की आवश्यकता पड़ सकती है।
<ul style="list-style-type: none"> जलने की गंध। 	<ul style="list-style-type: none"> ओवन में, हीटिंग तत्वों और क्रंब ट्रे में खाद्य सामग्री का जमा होना। 	<ul style="list-style-type: none"> “अपने टोस्टर ओवन को साफ करना” अनुभाग देखें।
<ul style="list-style-type: none"> ओवन ऑन नहीं होता। 	<ul style="list-style-type: none"> यूनिट का प्लग नहीं लगा हुआ। टाइमर को 20 मिनट के निशान के आगे नहीं सेट किया गया है। 	<ul style="list-style-type: none"> टोस्टर ओवन को एक उपयुक्त इलेक्ट्रिक आउटलेट में लगाएँ। टाइमर नॉब और टेम्परेचर नॉब को इच्छित सेटिंग पर सेट करें। टोस्टर ओवन को चलाने के लिए दोनों ऑन होने चाहिए।
<ul style="list-style-type: none"> केवल एक हीटिंग तत्व ही गरम हो रहा है। 	<ul style="list-style-type: none"> फंक्शन सेटिंग चयन निर्धारित करती है कि कौन सा हीटिंग तत्व कार्य करेगा। 	<ul style="list-style-type: none"> टोस्टिंग करते समय, सुनिश्चित करें कि ओवन ब्रॉइल सेटिंग पर सेट न किया हुआ हो।



वारंटी

सनबीम प्रोडक्ट्स, इंक जार्डन कंज्यूमर सॉल्यूशंस के रूप में व्यवसाय कर रही है, इसके सहयोगी व सहायक संगठन, जार्डन कंज्यूमर सॉल्यूशंस ऑफ इंडिया प्राइवेट लिमिटेड (बाद में सामूहिक रूप से “SPI” के रूप में संदर्भित) आश्वासन देते हैं कि खरीद की दिनांक से (2) दो वर्ष तक, यह उत्पाद सामग्री या कारीगरी संबंधित किसी भी दोष से मुक्त रहेगा (“वारंटी”)।

कृपया डीलर द्वारा साइन किए गए व स्टैम्प लगे हुए वारंटी कार्ड और कैश मेमो को यथावत संभाल कर रखें, क्योंकि इस वारंटी के अंतर्गत किसी भी दावे के लिए इसकी आवश्यकता पड़ेगी।

1. वारंटी के अंतर्गत अधिकार व हित आपके कानूनी अधिकारों के अलावा आपको मिलने वाले अधिकार हैं, आपके कानूनी अधिकार इस वारंटी से प्रभावित नहीं होते।
2. अवधि वारंटी के दौरान, अपनी पसंद पर SPI खराब पाए गए उत्पाद के किसी भी भाग या उत्पाद को निःशुल्क सुधारेगा या बदलेगा (या तो उस डीलर के माध्यम से जिससे उत्पाद खरीदा गया था या लोगों की पुष्टि करने के लिए कार्ड बिजनेस में सूचीबद्ध सेवा केंद्र के माध्यम से), बशर्ते कि:
 - SPI को खराबी की तत्काल ही खबर की गई हो।
 - SPI उत्पाद को किसी भी तरह से बदला न गया हो या उसका दुरुपयोग न किया गया हो या SPI द्वारा अधिकृत व्यक्ति के अलावा किसी अन्य व्यक्ति ने इसे ठीक न किया हो।
3. सेकेंड हैंड उत्पाद लेने वाले किसी भी व्यक्ति को इस वारंटी के अंतर्गत कोई अधिकार प्रदान नहीं किए जाते।
4. कोई भी ठीक किए गए या बदले गए उत्पाद पर वारंटी, जिस देश में उस उत्पाद को खरीदा गया है उस देश में वारंटी की शेष अवधि के लिए, इन्हीं शर्तों पर मिलेगी।
5. परिणामी हानि या क्षति के लिए दायित्व न तो स्वीकार किया जाता है और न ही यह अंतर्निहित है।
6. SPI की वारंटी में निम्नलिखित शामिल नहीं हैं:
 - क. यदि उत्पाद को अभीष्ट उपयोग के अलावा किसी अन्य तरीके से इस्तेमाल किया गया है।
 - ख. यदि उत्पाद को उसके साथ आई निर्देश पुस्तिका/उपयोगकर्ता पुस्तिका के अनुसार उपयोग नहीं किया गया है।
 - ग. यदि दोष अनुचित या लापरवाही से उपयोग करने के कारण हैं।
 - घ. यदि उत्पाद नेशनल उत्पादनकर्ता आयातक या संबंधित व्यापारी द्वारा अधिकृत लोगों के अलावा अन्य किसी के द्वारा ठीक किया गया है।
 - च. गलत विद्युत या वोल्टेज अथवा दोषपूर्ण बिजली की आपूर्ति का उपयोग।
 - छ. नियमित इस्तेमाल से पुर्जों और सहायक उपकरणों में हुई मामूली तोड़-फोड़।
 - ज. ग्राहक की ओर से परिवहन, दुर्घटनाओं, उत्पाद से छेड़छाड़ या उसकी लापरवाही से होने वाली क्षतियाँ।
 - झ. निम्नलिखित पुर्जे/घटक:
 - गिलास कंटेनर
 - लाइट बल्ब
 - सहायक उपकरण
 - ट. उत्पाद का औद्योगिक या वाणिज्यिक उपयोग।

अपशिष्ट विद्युत उत्पादों को घर के कचरे के साथ नहीं निपटाया जाना चाहिए। जहाँ सुविधाएँ मौजूद हैं, कृपया रीसायकल करें।

अधिकृत सर्विस सेंटर

क्षेत्र	राज्य	शहर	नाम	पता	संपर्क व्यक्ति	संपर्क नं—
पूर्व	पश्चिम बंगाल	कोलकाता	जील्स कंजुयूर सर्विसोज प्रा.लि.	356, जोधपुर पार्क, कोलकाता— 700068	सोमेश्वर बासु	(033)40012100
	पश्चिम बंगाल	कोलकाता	साउदर्न सर्विसोज	6 / 19A, प्रिंस अनवरशाह रोड, पोद्दार नगर, कोलकाता—700048	सुब्रता मन्ना	(033)24729651/6548822
	पश्चिम बंगाल	कोलकाता	बैषानु सर्विस केयर	55 D, अद्यानाथ साहा रोड, लेक टाउन, नियर जया सिनेमा, कोलकाता—700048	पियुष नंदन	(033)40664210
	पश्चिम बंगाल	हावड़ा	टाइम एन सर्विस	37&38 मोहेनाथ लेन, सालकिआ हावड़ा—711106	तपस हाजरा	(033)65639720
	पश्चिम बंगाल	हुगली	DNP एंटरप्राइज	52, शाहगंज मेन रोड, पीओ. शाहगंज, नियर बंदेल स्टेशन, हुगली—712104	इंद्रजीत बाग	(0)9163668360
	पश्चिम बंगाल	बैरकपुर	बालाजी एंटरप्राइज	4 / E / A बरसात रोड, बैरकपुर, जिला परगना, नियर 15 नं. रेल गेट, बैरकपुर—700122	प्रदीप कु. घोष	(033)25451224
	पश्चिम बंगाल	सिलिगुड़ी	एस.डी इलेक्ट्रॉनिक्स	डेस लॉज, 138 / 69 / 57, नजरुल सरणी, आश्रमपारा, सिलिगुड़ी—734001	अरुप डे	(0353)2526028
	पश्चिम बंगाल	आसनसोल	येस सर्विस	ह्यूटन रोड, नियर महल बैक्वेट मैरिज हॉल, आसनसोल—713301	सरफराज अहमद	(03228) 2280029
	असम	गुवाहाटी	मल्टी ट्रेक सर्विसोज	जी एस रोड, ग्राउंड फ्लोर, बोरा सर्विस स्टेशन, उलुबारी, गुवाहाटी—781007	कल्लोल दत्ता	(0361)2457296



अधिकृत सर्विस सेंटर

उत्तर	दिल्ली	दिल्ली	जील्स कंजयुमर सर्विसेज प्रा.लि.	#E-10, आर्यसमाज रोड, स्कूल रोड, उत्तम नगर, दिल्ली-1100059	मो. खासिद परवेज	(011) 45785915
	दिल्ली	दिल्ली	जील्स कंजयुमर सर्विसेज प्रा.लि.	R-32, 2nd फ्लोर, विकास मार्ग, शकरपुर, हीरा स्वीट्स के सामने, मैट्रो गिलर #46, दिल्ली-1100092	मनजीत सिंह	(011)47754764
	दिल्ली	दिल्ली	एस टी सर्विसेज	M-131, 1st फ्लोर, गुरु हरकिशन नगर, पश्चिम विहार, नई दिल्ली- 110041	विपिन यादव	(011) 32958438 / 45586987
	हरियाणा	गुड़गाँव	जील्स कंजयुमर सर्विसेज प्रा.लि.	4/18 A, 1st फ्लोर, लक्ष्मी गार्डन, पुलिस चौकी के पीछे, खांदसा रोड, गुड़गाँव-122001	करमवीर फोगात	(0124) 4073434
	हरियाणा	फरीदाबाद	जील्स कंजयुमर सर्विसेज प्रा.लि.	5-H-49, 1st फ्लोर, एन आइ टी फरीदाबाद-121001	मनोज कुमार पनवर	(0129) 4163003
	उत्तर प्रदेश	नोएडा	जील्स कंजयुमर सर्विसेज प्रा.लि.	1st फ्लोर, पंजाब एटीएम के ऊपर, सेक्टर-22, चौड़ा मोड़, मेन रोड, ओरिएंटल बैंक ऑफ कॉमर्स के पास, राजकीय इंटर कॉलेज के सामने, नोएडा, उ.प्र.- 201301	देवेन्द्र सिंह	(0120) 4162644
	उत्तर प्रदेश	लखनऊ	स्वार्थिक कस्टमर केयर	I-1/3, SEC&H अलीगंज, केन्द्रीय भवन के पास, लखनऊ-226020	जमाशंकर मिश्रा	(0522) 3298003 / 4102581 / 4102582
	उत्तर प्रदेश	कानपुर	शुभम इलेक्ट्रॉनिक्स	192,मनोहर नगर बाड़ा-3, दीपशिखा गेस्ट हाउस के सामने, कानपुर-208027	सुमन गुप्ता	(0512) 2283394 / 2602029
	उत्तर प्रदेश	आगरा	साई इलेक्ट्रॉनिक्स	25/113, गाँधीनगर, आगरा-282003	अजय सिंगल/ सुनील	(0562) 3297005
	हरियाणा	अम्बाला	टेली केयर	ओल्ड हॉस्पिटल रोड, बड़ा ठाकुर द्वार, पॉलीटेक्नीक के सामने, अम्बाला सिटी-134003	देविन्दर शर्मा	(0171) 25567369
	हरियाणा	सोनीपत	सईबाबा एंटरप्राइज	हाउस नं.1510, सेक्टर-15, सोनीपत-131001	प्रमोद शर्मा	(0130) 6411206
	हरियाणा	करनाल	जील्स कंजयुमर सर्विसेज प्रा.लि.	शॉप #50, ग्राउंड फ्लोर, मायापुरी, राजीव गांधी मार्ग/राह पैलेस के पास, मीराघाटी चौक, करनाल-132001	नीरज शर्मा	(0184) 4022201
	पंजाब	मोहाली	जील्स कंजयुमर सर्विसेज प्रा.लि.	#SCF-4, बेसमेंट, द हाई लैंड सोसायटी, NAV, बलराना, जिरखपुर, मोहाली-140603	शिव घांडा	(0176) 2652574
	पंजाब	लुधियाना	जील्स कंजयुमर सर्विसेज प्रा.लि.	शॉप #18 B, ध्यान सिंह कमर्शियल कॉम्प्लेक्स, बस स्टैंड के सामने, लुधियाना-141001	गुरवीर सिंह	(0161) 2444002
	पंजाब	जलांधर	जील्स कंजयुमर सर्विसेज प्रा.लि.	EH-31, लड्डोवाली रोड, गुरुदास के सामने, जलांधर-144001	अशोक कुमार	(0181) 2221707



अधिकृत सर्विस सेंटर

पश्चिम	महाराष्ट्र	मुम्बई	एस पी सर्विसेज.	शॉप नं.10, अब्दुल स्तार कंपाउंड, फिटवाला रोड, सतगुरु दर्शन बिल्डिंग के सामने, रेलवे स्टेशन के पास, एल्फिस्टन रोड (प.), मुम्बई-400013	पालसिंह पन्यारी	(022) 24326726 / 24312623
	महाराष्ट्र	मुम्बई	जील्स कंजयूमर सर्विसेज प्रा.लि.	प्लॉट नं. 27 / 5, पावनी चौक, मुलुंद दर्शन बिल्डिंग के सामने, मुलुन्द कॉलोनी, मुलुन्द(प.), मुम्बई-400082	रमेश यादव	(022) 65288597
	महाराष्ट्र	मुम्बई	जील्स कंजयूमर सर्विसेज प्रा.लि.	शॉप नं. 1-1A, गार्डन प्लोर, कीर्ति को-ऑप हाउसिंग सोसायटी, रामचन्द्र एक्स्टेंशन लेन, मूवी टाइन के पास, एवरशाइन नगर, मल्लाई (प), मुम्बई-400064	मुरली जोशी	(022) 65278590
	महाराष्ट्र	पुणे	जील्स कंजयूमर सर्विसेज प्रा.लि.	नं. 337, साई लीला, 1st प्लोर, दत्त वाडी, महासोबा चौक, पुणे-411030	साकेत दुबे	(020) 24321679
	महाराष्ट्र	नागपुर	टेक्नीक सर्विसेज	खरे बिल्डिंग, हनुमान लेन, सीताबिल्डिंग, नागपुर-440012	दिलीप पांडा	(0712) 2550076
	महाराष्ट्र	चन्द्रपुर	सुविधा इलेक्ट्रॉनिक्स	नं. 1 देवी अपार्टमेंट, चर्च रोड, हनुमान नगर, दुकुम, चन्द्रपुर-442401	सुमाश देशकर	(07172) 258966 / 256453
	महाराष्ट्र	कोल्हापुर	सिक्किर मोबाइल्स	1492 सी वार्ड, लक्ष्मीपुरी, टाटा ब्रांड स्टोर के सामने, कोल्हापुर-416001	सुकीर बाकरे	(0) 9372555011
	महाराष्ट्र	औरंगाबाद	एप्पर सर्विसेज	S-5, माणिक आर्कड कालडा कॉर्नर, चौबे हॉस्पिटल के सामने चेतना नगर, औरंगाबाद-31005	मि. विली बेंटो कोलाको	(0240) 2350606
	महाराष्ट्र	नासिक	हर्षा इलेक्ट्रॉनिक्स	3, तलक कॉम्प्लेक्स, रचना विद्यालय रोड, सहारनपुर रोड, नासिक-422002	प्रवीन पाटिल	(0) 9422254240
	गोवा	सैल्सेट	जॉली एटर्प्राइजेस	शॉप # G-2.78 / A न्यूवेम एक्लेव, NH-17 हाईवे, बेलोए नुवेम, सैल्सेट-403604	जॉन गोंजैल्वस	(0832) 2791800
	गुजरात	अहमदाबाद	जील्स कंजयूमर सर्विसेज प्रा.लि.	नं.37, ओम टॉवर, स्टार बाजार के पास, जोधपुर क्रॉस रोड, सैटेलाइट, अहमदाबाद-380015	गिरिश परमार	(079) 40080485
	गुजरात	बड़ौदा	उदय रेफ्रिजरेशन	G / 3 नंदनवन कॉम्प्लेक्स, आत्मा ज्योती आश्रम रोड, सिटीजन सोसायटी के पीछे, एल्लोरा पार्क, बड़ौदा	शैलेश	(0265) 6590948
	गुजरात	सूरत	सदगुरुदेव	शॉप नं. L / 6, शकुंतल कॉम्प्लेक्स, सागवी टॉवर के पास, गुजरात गैस सर्कल के निकट, एडाजन पाटिया, सूरत-395009	मनोज राणा	(0261) 6540417
	गुजरात	राजकोट	पीसी सिरटम्स	4-सरदार नगर (पश्चिम), टैगोर रोड, एस्ट्रॉन सर्कल के पास, राजकोट-360001	मनोज गोहिल	(0281) 2480479
	मध्यप्रदेश	इंदौर	कूल होम रेफ्रिजरेशन	LG-70, ट्रेड सेंटर, 18, साउथ टुकोगंज, इंदौर-452001	हुसैन अंजुम	(0731) 4076404
	मध्यप्रदेश	भोपाल	जील्स कंजयूमर सर्विसेज प्रा.लि.	वार्ड नं.47, गोयल विहार, गार्डन प्लोर, प्लैट नं.-जी-1, 31-सी, जैन-2, एम पी नगर, भोपाल	राम आशीष प्रसाद	(0755) 4059310

अधिकृत सर्विस सेंटर

दक्षिण	तमिलनाडू	चेन्नई	जीव्स कंज्यूमर सर्विसेज प्रा.लि.	न्यू नं.3, ओल्ड नं.1-A, श्रीपुरम 2nd लेन, रॉयलपीठ, चेन्नई-600014	दिनेश कुमार	044-42632371
	तमिलनाडू	चेन्नई	जी सी सर्विसेज	ओल्ड नं. 12, न्यू नं. 37, 1st फ्लोर, सत्ताना नैचेन स्ट्रीट, नेहरू टिम्बर मार्केट, चूलाई, चेन्नई-600112	नवल आर	(044) 26690084/ 42822868
	तमिलनाडू	कोयम्बतूर	वी. के. इंजीनियरिंग	108-A/92, वेस्ट पोन्नुरंगम रोड, ग्राउंड फ्लोर(टेलीफोन एक्सचेंज के पास) आर. एस. पुरम, कोयम्बतूर-641002	सेल्वादुरै	(0422) 2541172
	पॉन्डिचेरी	पॉन्डिचेरी	बेस्ट्रॉनिक्स	49, सेंट टेरेसा स्ट्रीट, पॉन्डिचेरी-605001	बी जयाशंकर	(0) 9443728020
	आन्ध्र प्रदेश	हैदराबाद	जीव्स कंज्यूमर सर्विसेज प्रा.लि.	फ्लैट नं. 205, करन सेंटर, IBP पैट्रोल पंप और करण होटल के पास, पार्क लेन, एस. डी. रोड, पैराडाइज सर्कल के पास, सिकन्दराबाद-500003	कुमारराजन	(040) 64591168
	आन्ध्र प्रदेश	विजयवाड़ा	जीव्स कंज्यूमर सर्विसेज प्रा.लि.	डोर नं. 25-10-10-A जी. एस. राजू रोड, गांधी नगर, जिमखाना रोड, विजयवाड़ा-520003	रहमतुल्लाह गोज खान	(0866) 6591168
	कर्नाटक	बेंगलूरु	जीव्स कंज्यूमर सर्विसेज प्रा.लि.	नं. 126, 1st फ्लोर, 8जी मेन जे.पी. नगर, 3rd फेस, बेंगलूरु-560078	रमेश कुमार	(080) 41209331
	कर्नाटक	बेंगलूरु	जीव्स कंज्यूमर सर्विसेज प्रा.लि.	फर्स्ट फ्लोर, खान बिल्डिंग, 7 & 8 जी क्रॉस, जक्कासन्ना एक्स्टेंशन, बेंगलूरु-560032	सुरुलिवेल	(080) 25520424
	कर्नाटक	मंगलोर	जीव्स कंज्यूमर सर्विसेज प्रा.लि.	1st फ्लोर, क्वाड्रा कपाउंड, बेज, कपिकडें, कवूर रोड, मंगलोर-575004	दिवाकर शेट्टी	(0824) 2213699
	कर्नाटक	मैसूर	जीव्स कंज्यूमर सर्विसेज प्रा.लि.	नं. 1095, 1st फ्लोर, C & D ब्लॉक, लैथाइरी रोड, कुवेम्पुनगर, मैसूर-570023	वेंकटेश एस. कुलकर्णी	(0821) 4191094



WARRANTY CARD

© 2013 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions.
All rights reserved. Distributed by Jarden Consumer Solutions of India Private Limited, Unit B-204,
Universal Business Park, Off Saki Vihar Road, Chandivali Farm Road, Andheri (E)
Mumbai 400 072, India. 2 Year Limited Warranty – see inside for details. Sunbeam Products, Inc. and Jarden
Consumer Solutions of India Private Limited are subsidiaries of Jarden Corporation (NYSE: JAH).
1-800-102-6300

© 2013 सनबीम प्रोडक्ट्स, इंक जार्डन कंज्यूमर सॉल्यूशंस के रूप में व्यवसाय कर रही है।
सभी अधिकार सुरक्षित हैं। जार्डन इंडिया प्राइवेट लिमिटेड कंज्यूमर सॉल्यूशंस ऑफ इंडिया प्राइवेट लिमिटेड, यूनिट
B-204, यूनिवर्सल बिजनेस पार्क, ऑफ साकी विहार रोड, चाँदीवली फार्म रोड, अंधेरी (ई) मुंबई 400 072, भारत
द्वारा वितरित। 2 वर्ष लिमिटेड वारंटी – विवरण के लिए अंदर देखें। सनबीम प्रोडक्ट्स इंक, और जार्डन कंज्यूमर
सॉल्यूशंस ऑफ इंडिया प्राइवेट लिमिटेड, जार्डन कॉर्पोरेशन (NYSE: JAH) की सहायक कंपनियाँ हैं।

1-800-102-6300

Model No. : _____
मॉडल नं.

Date of Purchase : _____
खरीदने की तारीख

Dealer's Stamp : _____
डीलर की मुहर

Printed in PRC
चीन में मुद्रित

TSSTTVXXLL-049_13EHM1
P.N. 9100210000279
GCDS-HOL28543-ZZ